



## Flashing the Controller Firmware

On occasion, the F4T<sup>®</sup> firmware may be updated. When flashing the firmware ensure that power to the controller is not disrupted and allow the process to proceed to completion. Once the process is complete, the controller will come back up with the same configuration (in its entirety) prior to flashing.

To flash the controller to the latest firmware version:

1. Copy the file "F4T<sup>®</sup>Update" to the root directory of a USB thumb drive.
2. Insert the USB thumb drive into either of the USB ports on the back of the F4T<sup>®</sup>.

**Note:**

Prior to initiating this process ensure that there is only one thumb drive connected.

3. Push the **Menu** button.
4. Push the **Settings** button.
5. Push the **Update** button.
6. Push the **Install Update** button.

**Note:**

After executing step 6 above, the three screen shots below will appear on screen as the flashing activity proceeds.

**Copy files:**



**File Update:**



**File Update Complete:**



When this last screen appears, it will remain on screen for approximately 15 seconds.

**Note:**

The controller will be restored to reflect the same state it was in when the flashing activity was started. For example, if the controller was in auto mode it will be returned to auto mode.