

When connecting a 2-wire RTD, Inputs S1 & T1 must be jumped together.

If this is not carried out when connecting a 2-wire RTD the display will show an “Error”


Please note that this is not stated on the Quick Start Guide but it is shown in the full manual.

Note:

When using a 2 wire RTD, jumper S1 and T1 together.

Inputs

All inputs shown below represent input 1 (the only input) and are to be connected to slot A of the PID Control.

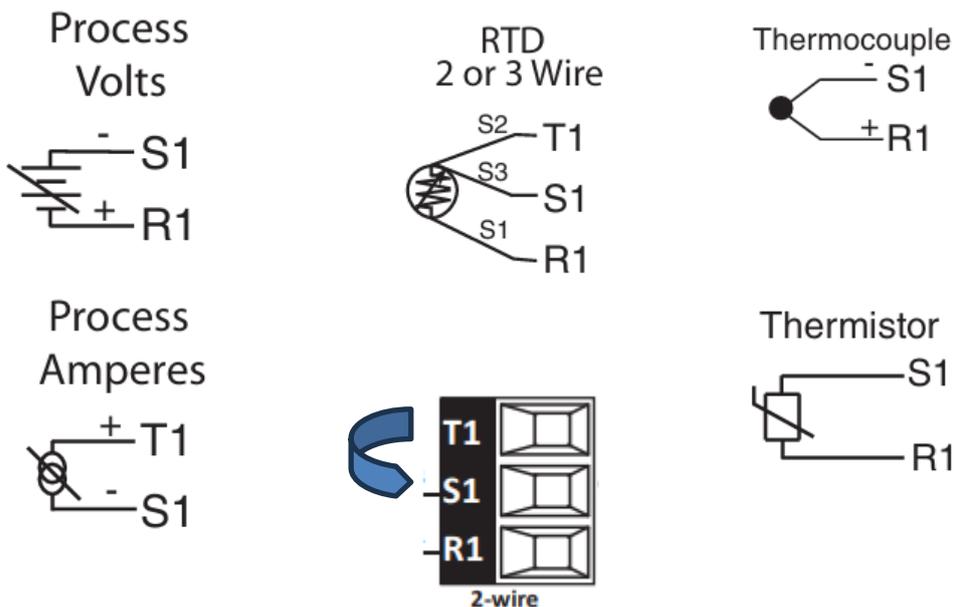

Link T1 & S1 when using a 2 wire RTD across S1 & R1